



Model RT Ratemeter Wiring Diagrams



Model RT Ratemeter Wiring Diagrams

CONTENTS

INTRODUCTION

I. FORCEMETER™ WITH INTERNAL POWER	3
II. FORCEMETER™ WITH EXTERNAL POWER	4
III. NIAGARA METERS® 1050 WITH INTERNAL POWER – CURRENT OUTPUT	5
IV. NIAGARA METERS® 1050 WITH EXTERNAL POWER – CURRENT OUTPUT	6
V. NIAGARA METERS® MAGMETER 6600 WITH INTERNAL POWER – CURRENT OUTPUT	7




INTRODUCTION

This guide illustrates the proper wiring connections required for the Model RT Ratemeter to be connected with other Niagara Meters® products. These diagrams should be consulted during installation and for any maintenance. Please consult the associated Installation and Operation Manual (IOM) for additional details and instructions.


Niagara Meters® Customer Support can be reached at (800) 778-9251 for additional inquiries.

I. ForceMeter™ with Internal Power

Integral Transmitter

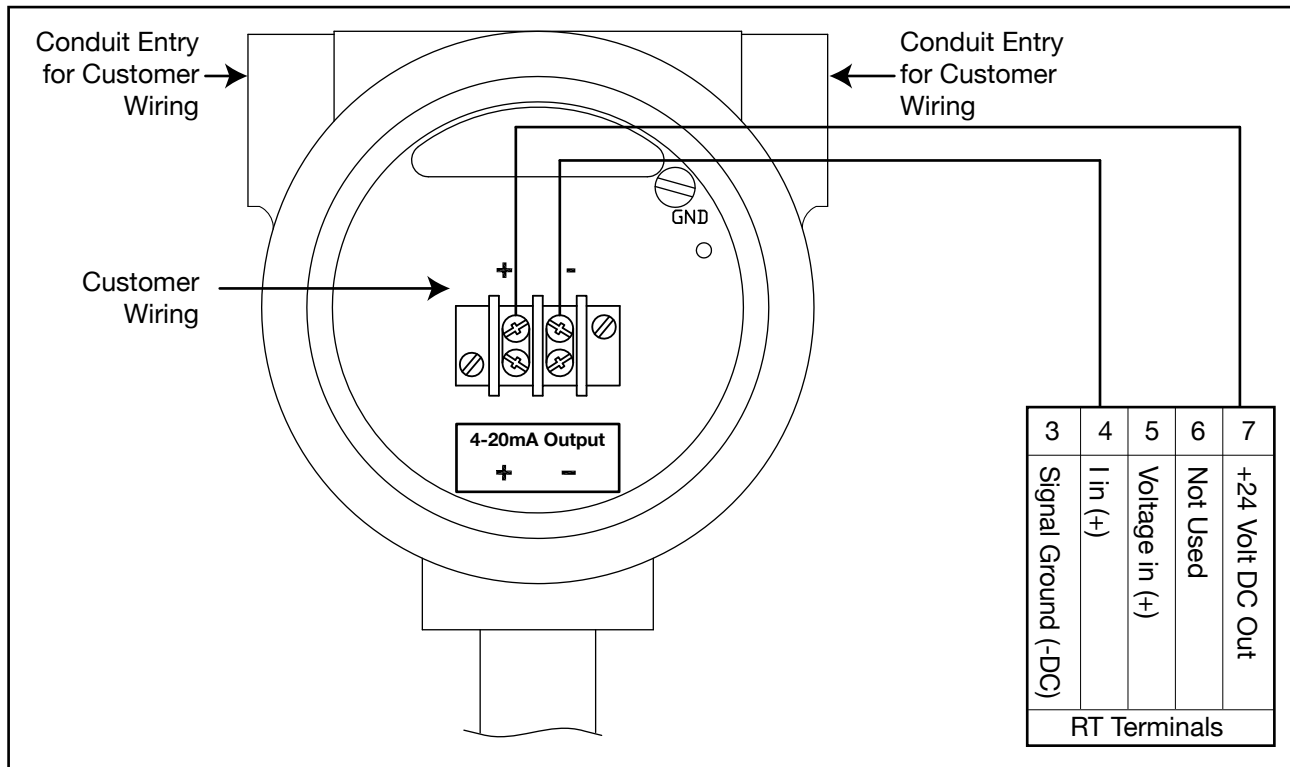


Remote Transmitter

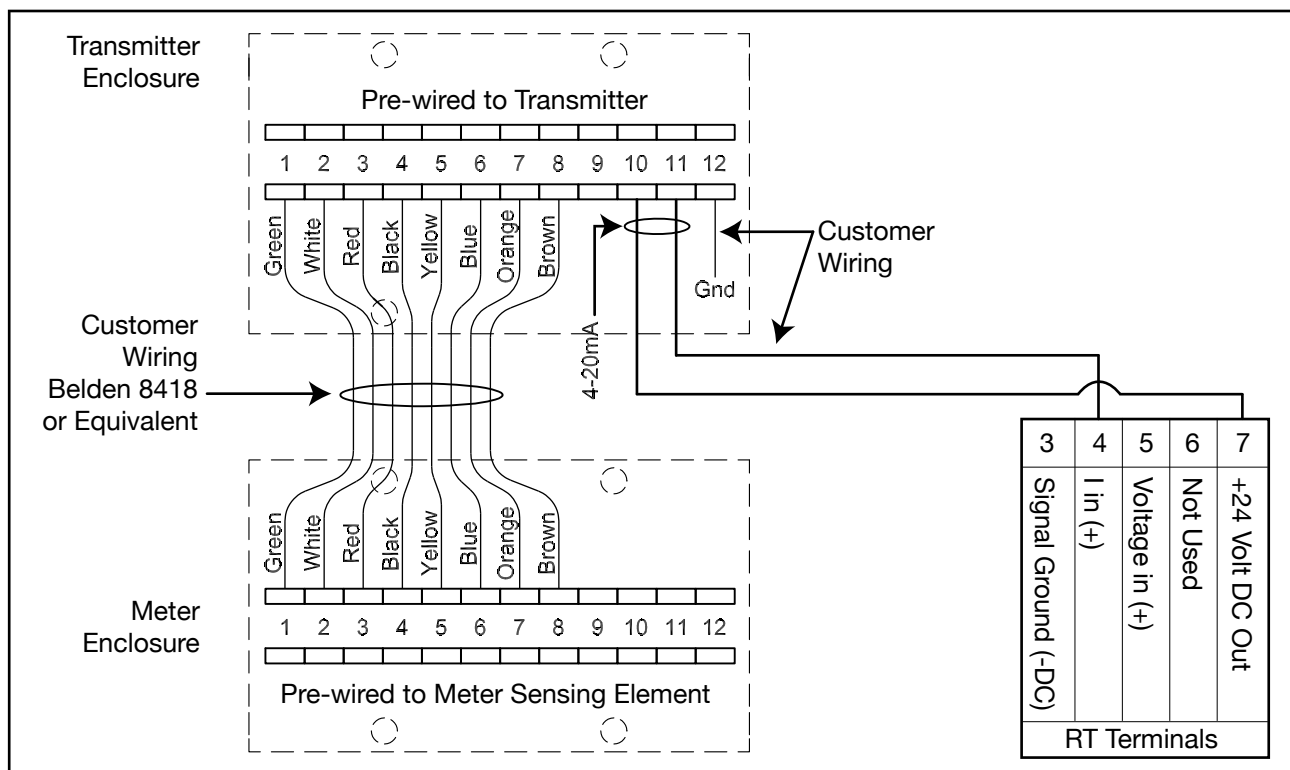


II. ForceMeter™ with External Power

Integral Transmitter

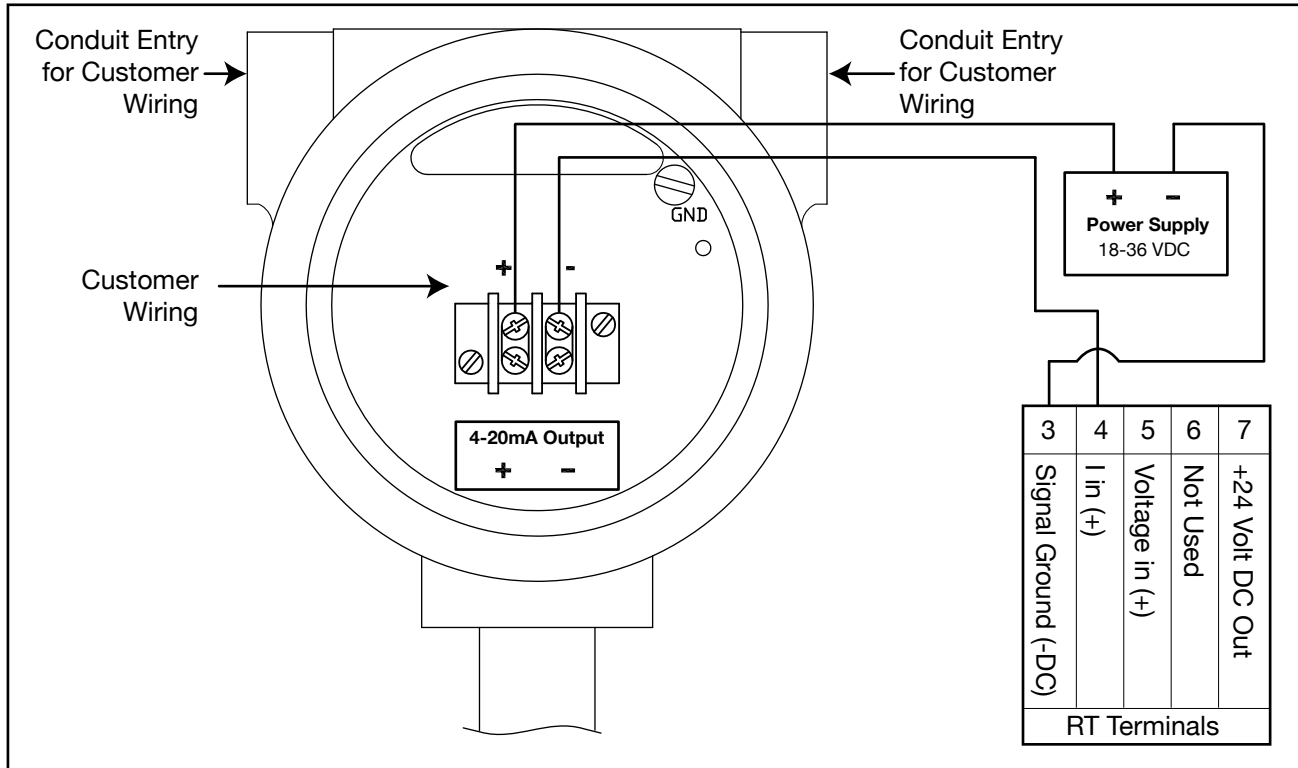


Remote Transmitter

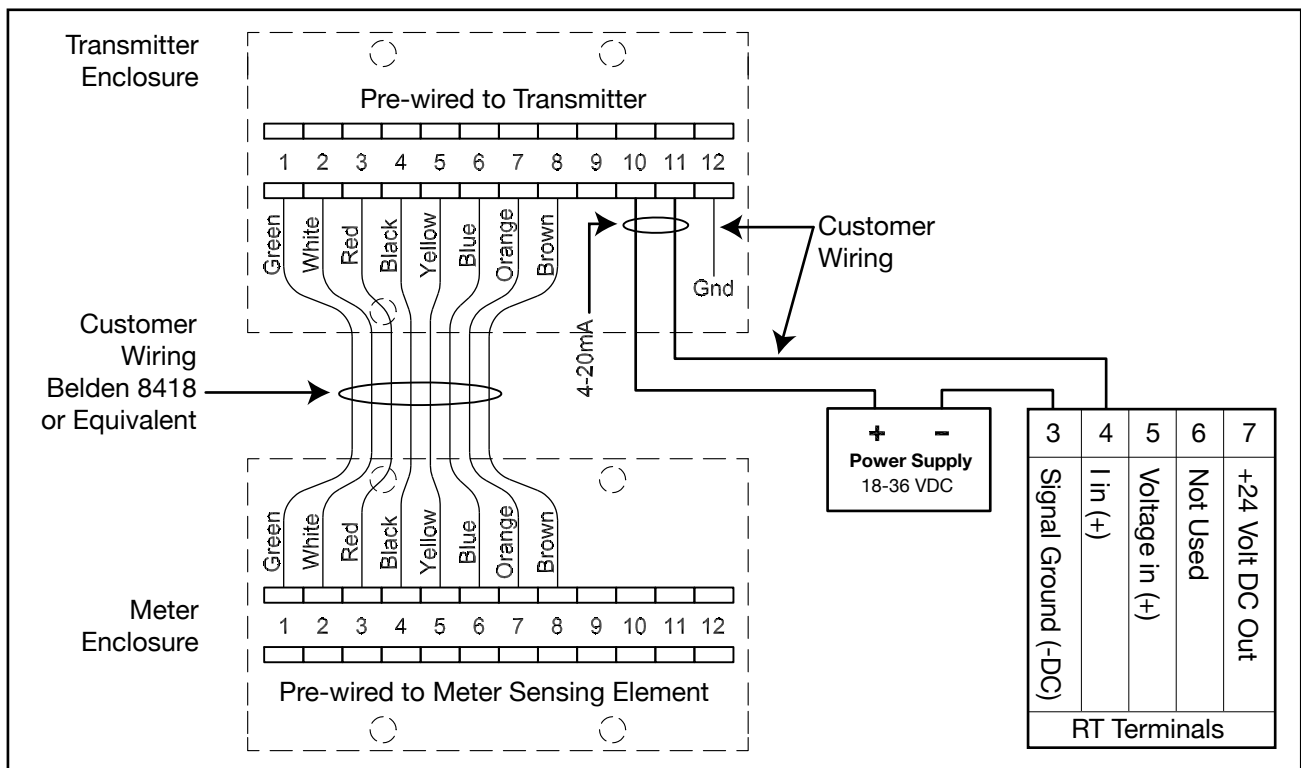


III. Niagara Meters® 1050 with Internal Power – Current Output

Integral Transmitter

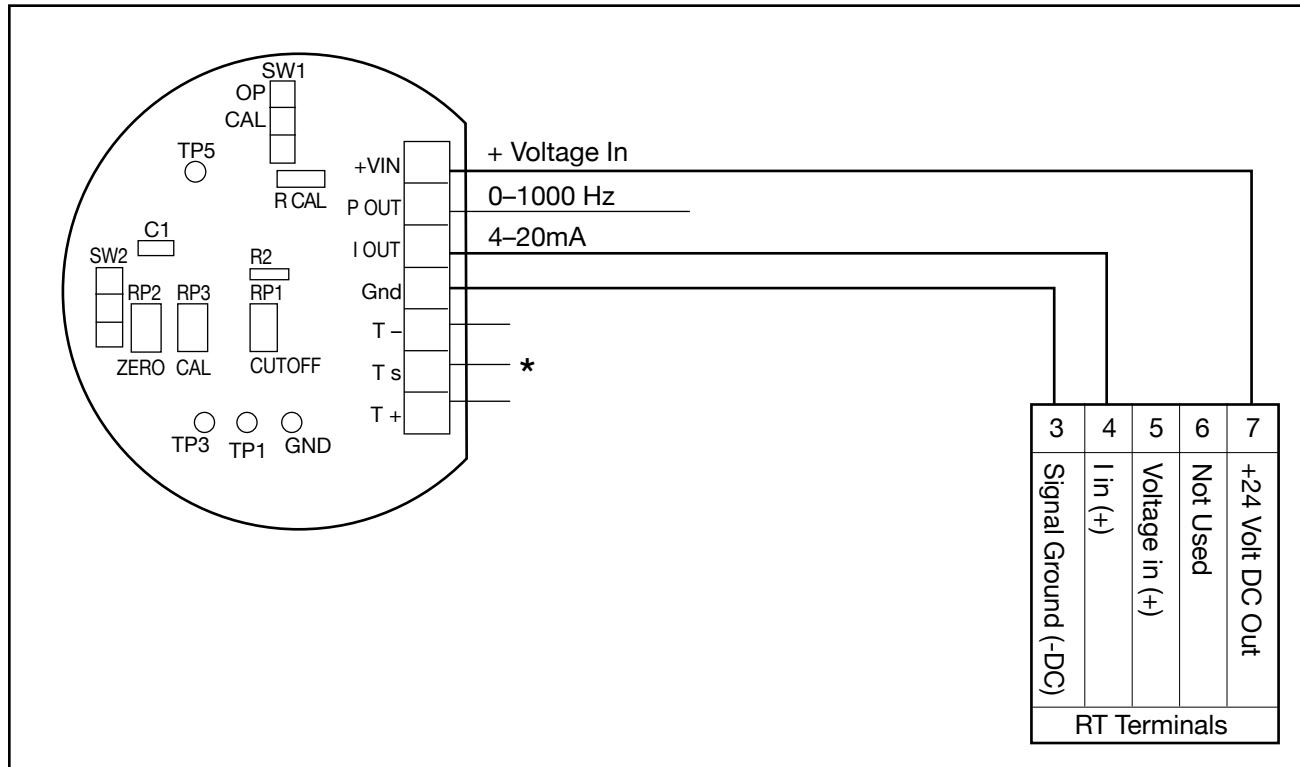


Remote Transmitter

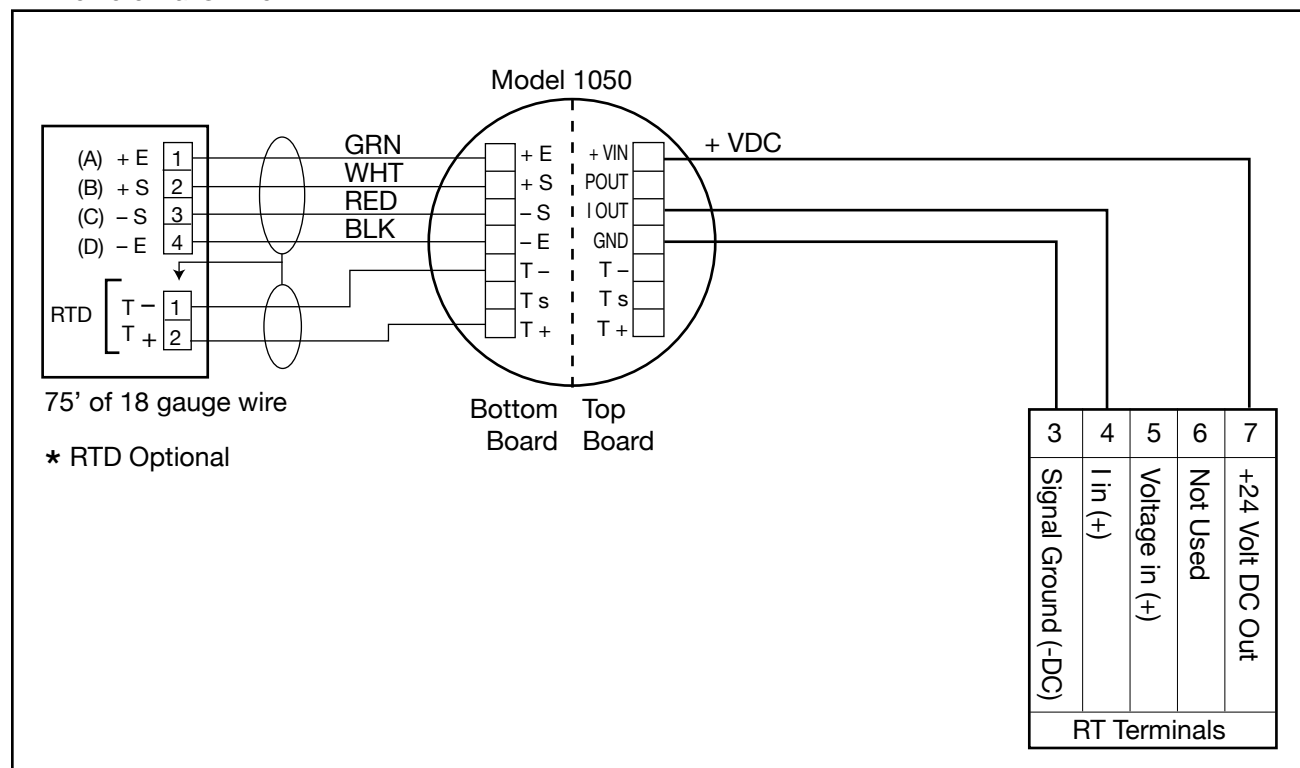


IV. Niagara Meters® 1050 with External Power – Current Output

Integral Transmitter

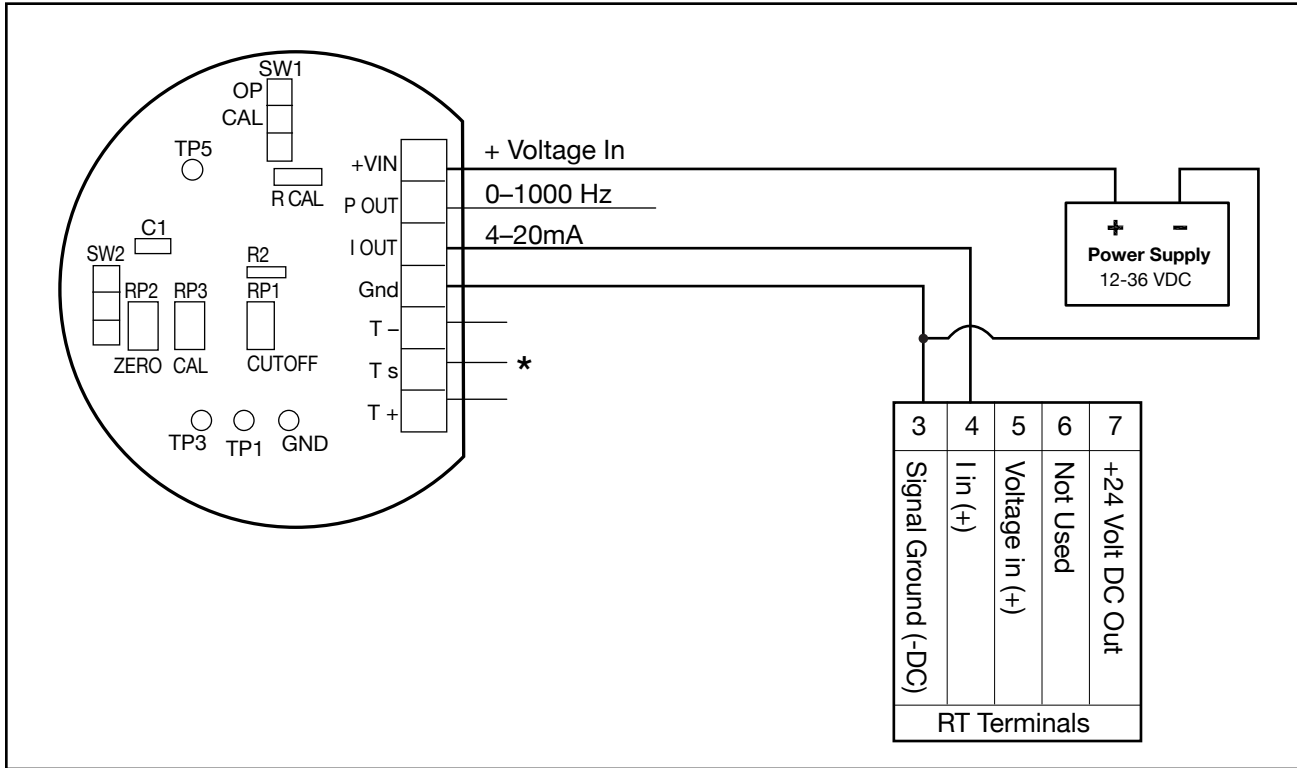


Remote Transmitter

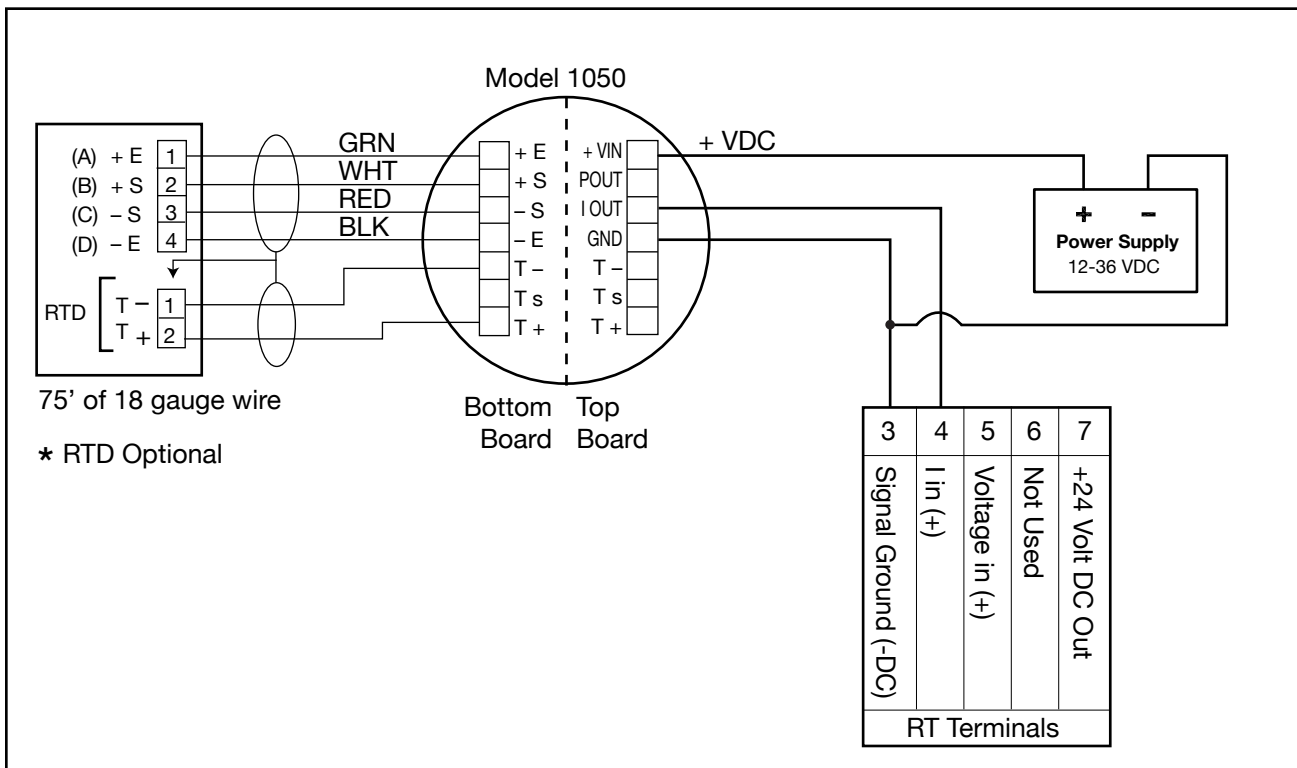

V. Niagara Meters® 6600 with Internal Power – Current Output

Integral Transmitter

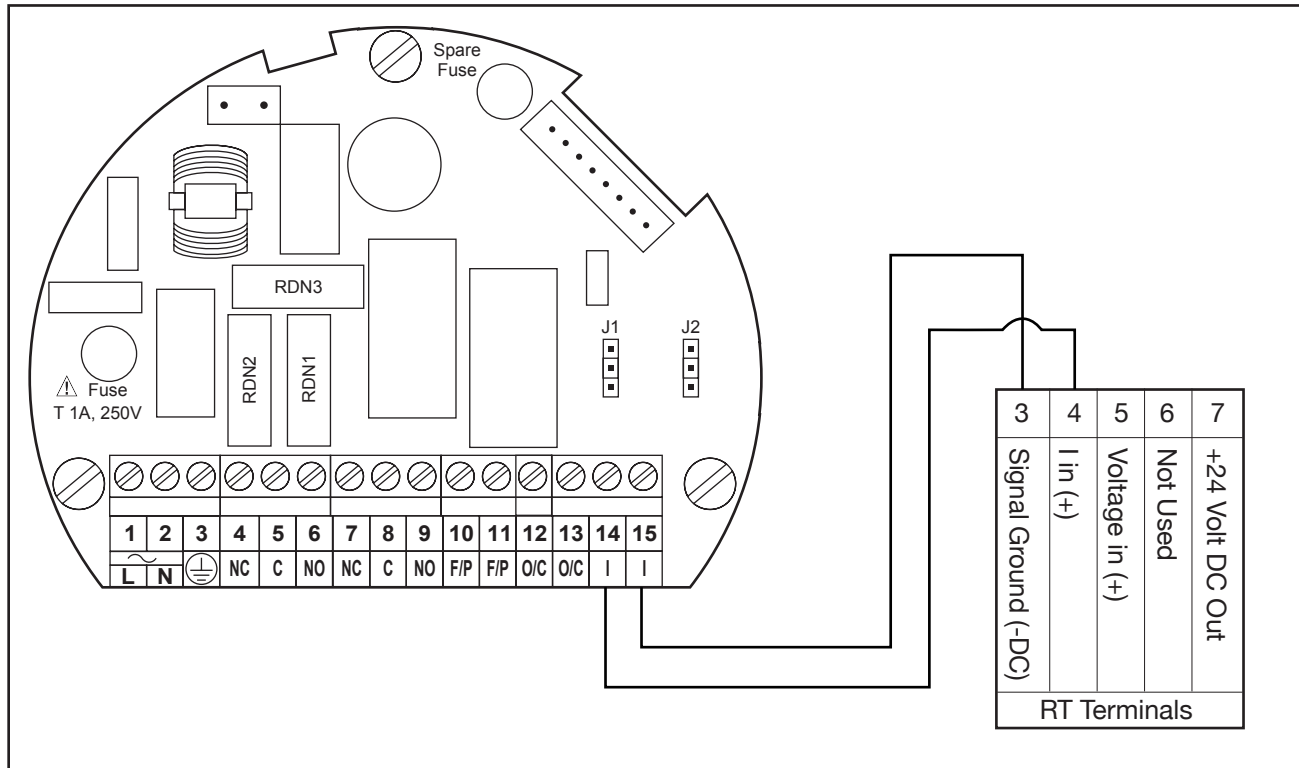



150 Venture Boulevard
Spartanburg, SC 29306
Tel: 800.778.9251
Fax: 864.574.8063
E-mail: sales@niagarameters.com
www.niagarameters.com

venture
MEASUREMENT

2012 All rights reserved.
All data subject to change without notice.
M903 Rev. A